



# Single lever sink mixer Energysave KITCHEN\_A3001585



# 234 012 050 CH.11 088 CH.11 088

### MODEL **A3001585**

Single lever sink mixer Energysave, swivel spout, G.3/8" stainless steel flexible hoses

### **AVAILABLE FINISHINGS**



21 Chrome



2F 2F Brushed Nickel



40 Matt Black

### **CHARACTERISTICS**

Cartridge Spare Parts

ZZ96373000

35 mm Cartridge



### **EcoStop**

EcoStop feature limits water flow to approximately 50% of maximum output with one point of resistance on setting. Push slightly past the middle stop only when full water output is required. This will save water up to 50%.




## **EnergySave**

Thanks to the EnergySave device, only cold water will be drawn if the lever is operated in the central position, so that the water heater will not be engaged and no hot water wasted, leading to considerable savings in energy and costs. The temperature can be adjusted by rotating the lever to the left, until the desired temperature is reached.





# Single lever sink mixer Energysave KITCHEN\_A3001585

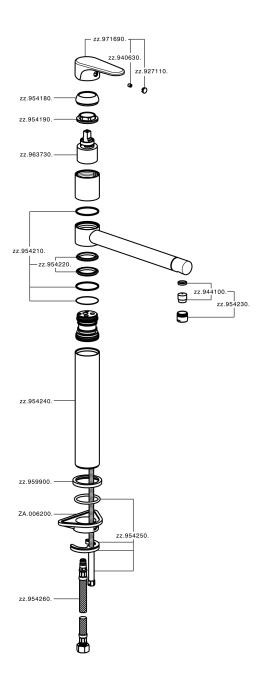

A3001585

https://en.cisal.it/single-lever-sink-mixer-energysave-kitchena3001585