

Single lever sink mixer Energysave KITCHEN_C2000585

MODEL **C2000585**

Single lever sink mixer Energysave, swivel spout, G.3/8" stainless steel flexible hoses

AVAILABLE FINISHINGS




21 21 Chrome

CHARACTERISTICS

Cartridge Spare Parts **ZZ96373000**

35 mm Cartridge

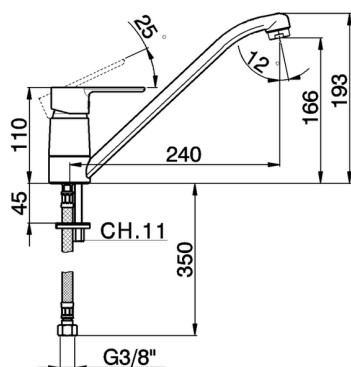

EcoStop

EcoStop feature limits water flow to approximately 50% of maximum output with one point of resistance on setting. Push slightly past the middle stop only when full water output is required. This will save water up to 50%.




EnergySave

Thanks to the EnergySave device, only cold water will be drawn if the lever is operated in the central position, so that the water heater will not be engaged and no hot water wasted, leading to considerable savings in energy and costs. The temperature can be adjusted by rotating the lever to the left, until the desired temperature is reached.



Single lever sink mixer Energysave KITCHEN_C2000585

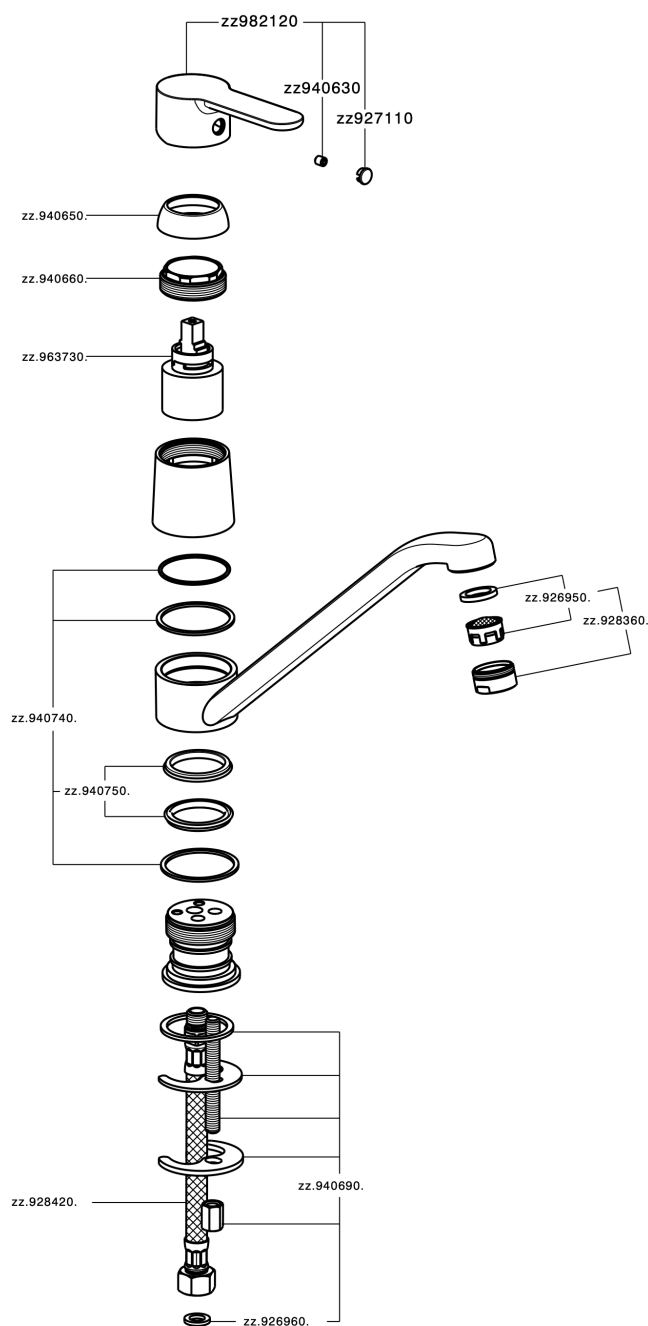

C2000585

<https://en.cisal.it/single-lever-sink-mixer-energysave-kitchen-c2000585>

2025-01-02