



Exposed part for concealed washbasin mixer SMOOTH X32_X3013511

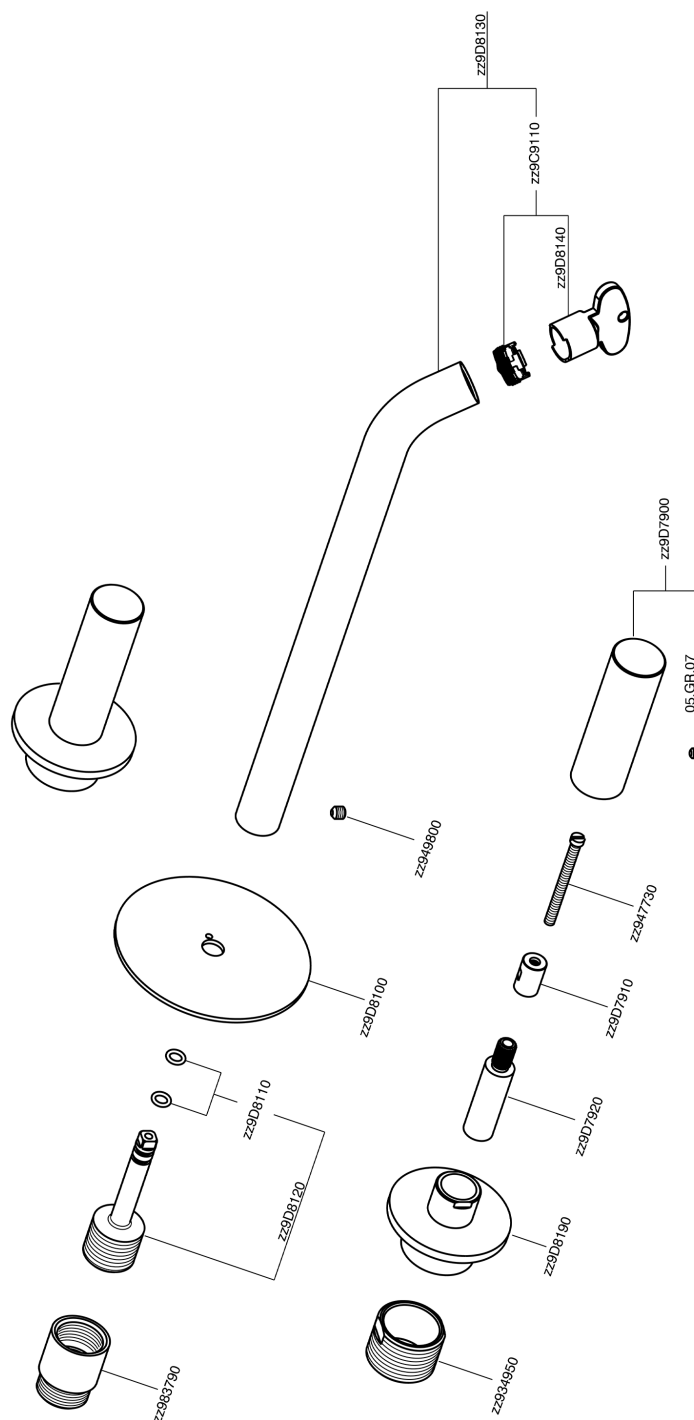

X3013511

<https://en.cisal.it/exposed-part-for-concealed-washbasin-mixer-smooth-x32-x3013511>

Concealed washbasin mixer CONCEALED_ZA033510

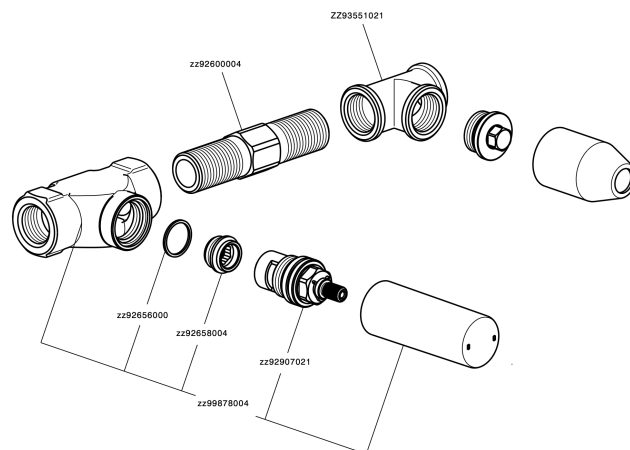

ZA033510

<https://en.cisal.it/concealed-washbasin-mixer-concealed-za033510>

2026-01-11